


## Spare parts for dial indicator 2308 series

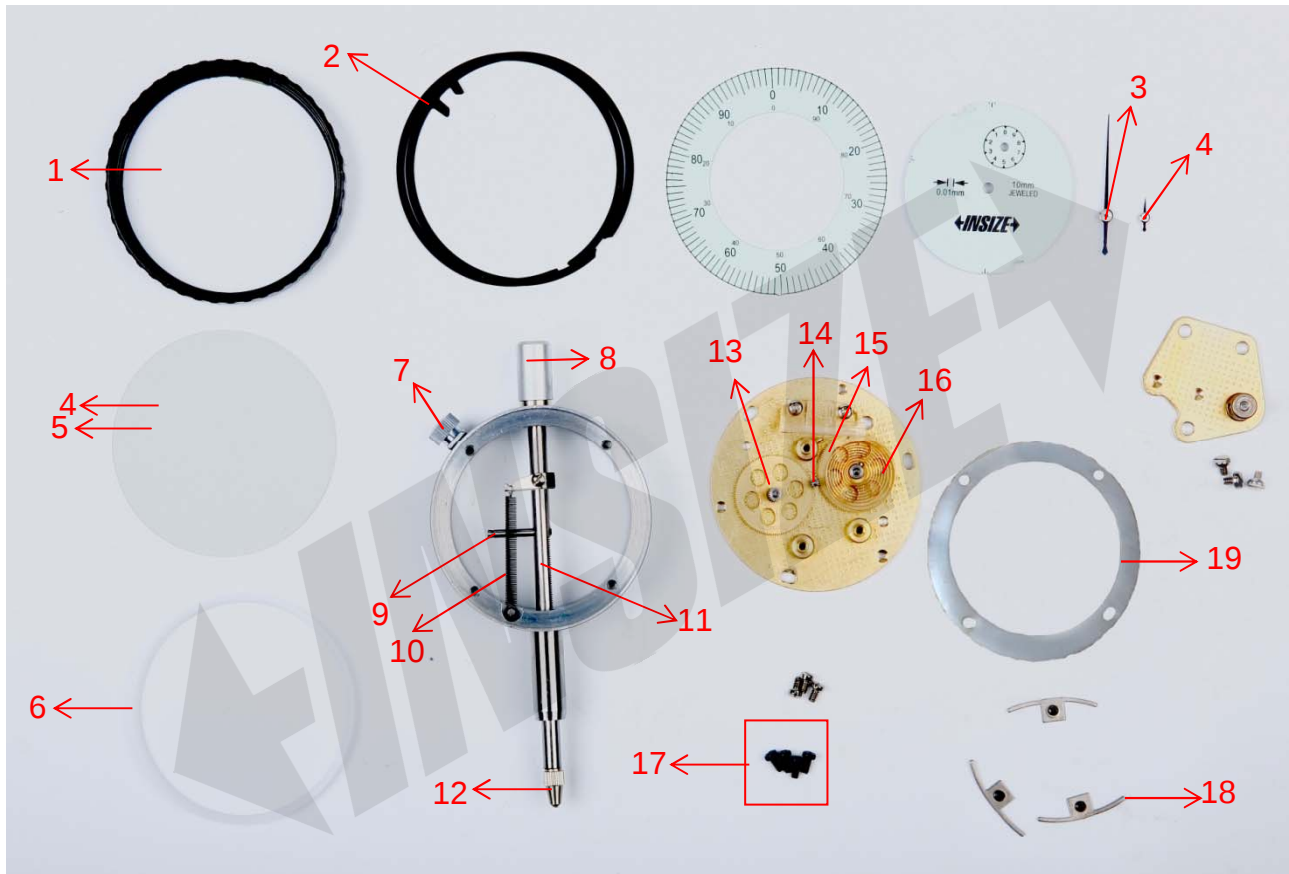

| Part NO. | Code                   | Description                   |
|----------|------------------------|-------------------------------|
| 1        | SP-BEZEL-2308T         | Bezel                         |
| 2        | SP-MARK-1              | Tolerance mark                |
| 3        | SP-NEEDLES-1           | Big needle                    |
| 4        | SP-NEEDLES-2           | Small needle                  |
| 5        | SP-DIAL-GLASS-2308     | Glass                         |
| 6        | SP-WASHER-2308T        | Washer                        |
| 7        | SP-LOCK SCREW-2308     | Lock screw                    |
| 8        | SP-CAP-2308            | Anti-dust cap                 |
| 9        | SP-GUIDE PIN-2308T     | Guide pin                     |
| 10       | SP-SPRING-2308         | Spring                        |
| 11       | SP-SPINDLE-2308T       | Spindle                       |
| 12       | SP-POINT-WL-1          | Contact point                 |
| 13       | SP-MAIN GEAR-2308T     | Main gear                     |
| 14       | SP-CENTRAL GEAR-2308T  | Central gear                  |
| 15       | SP-GEAR 2-2308T        | Assistant gear                |
| 16       | SP-SPIRAL SPRING-2308T | Spiral spring                 |
| 17       | SP-BACK SCREW-2308     | Screw for back                |
| 18       | SP-SNAP SPRING-2308T   | Snap spring                   |
| 19       | SP-RUBBER RING-2308    | Rubber ring for 2308 and 2114 |